Baby Feed and Magic Play Baby


HOW TO PLAY:

- 1) Turn the ON/OFF/DEMO on the battery case to the "ON" position. (See Fig. 3)
- 2) Squeeze the doll's left foot to activate.
- 3) The doll will make baby sounds, 3 phrases and play Peek-A-Boo with you using her blanket.
- 4) Place the doll in her highchair and you can feed her using the interactive spoon with food dish or baby bottle.
- 5) Place spoon to doll's mouth and she will make feeding sounds.
- 6) Switch back to "OFF" position of you do not want to continue playing or if you want to save battery life. (See Fig. 3)



BATTERY INSTALLATION :

- 1. Locate the battery compartment at bottom of the doll. (See Fig. 1)
- 2. Have an adult use a small Phillips® screwdriver to remove the battery compartment top. (See Fig. 2)
- Insert 3 AAA size batteries following polarity markings.
 We recommend using alkaline batteries. (See Fig. 3)

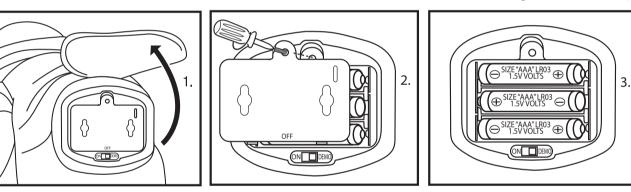

IMPORTANT: ONLY PARENTS / ADULTS SHOULD REPLACE BATTERIES.

- 1) Do not recharge non-rechargeable batteries.
- 2) Do not dispose of batteries in fire; they may leak or explode.
- 3) Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 4) Do not mix old and new batteries.
- 5) Use only batteries of the same or equivalent type as recommended by the manufacturer.
- 6) Be sure to insert batteries with correct polarities and always follow package and battery manufacturer's instructions.
- 7) Remove exhausted batteries from product.
- 8) Do not short-circuit supply terminals.
- 9) Keep these instructions for the future because they contain important information.
- 10) Rechargeable batteries are to be removed from the toy before being charged. (If removable).
- 11) Rechargeable batteries are only to be charged under adult

CLEANING THE DOLL:

- 1. Use a damp cloth to wipe off the doll.
- 2. Do not put the doll in a washng machine.

Please keep this instruction sheet. It contains important product information.

For Product Questions:

Call Customer Service 1-866-559-8697 Monday-Friday 9am-6pm (Number is only available in the U.S. and Canada. Eastern Standard Time) or e-mail us : customerservice@newadventuresllc.com

Please keep these instructions for future reference as they contain important information.

CAUTION: All ties or fasteners are not part of this toy and should be removed before giving it to your child. Color and product may vary from photo. Conforms to the safety requirements of ASTM-F963.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

supervision. (If removable).



©2015 New Adventures LLC LTD., Energy Plaza, TST, KLN, HONG KONG www.newadventuresllc.com Baby Magic is a registered trademark of Naterra International **MADE IN CHINA (DONGGUAN)** **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.