





2 in 1 Cradle n Carrier™

Assembly instructions:

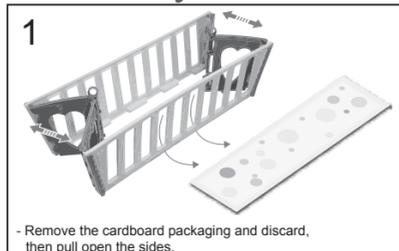


1 - Remove the cardboard packaging and discard, then pull open the sides.

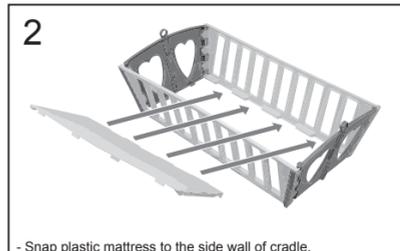


2 - Snap plastic mattress to the side wall of cradle.



3 - Fold the plastic mattress down into position inside the front, back and sides of the carrier.

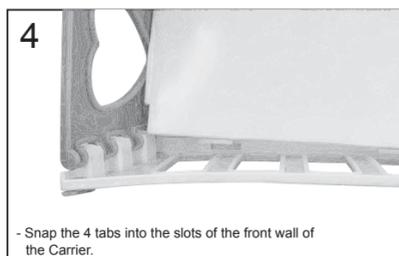


4 - Snap the 4 tabs into the slots of the front wall of the Carrier.

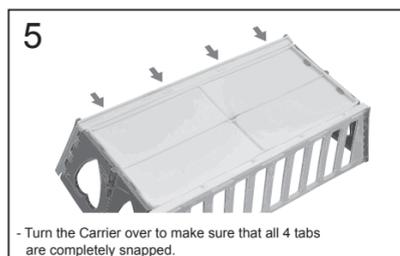


5 - Turn the Carrier over to make sure that all 4 tabs are completely snapped.




6 - Move the side walls inward and push the tabs into the sides of the floor.

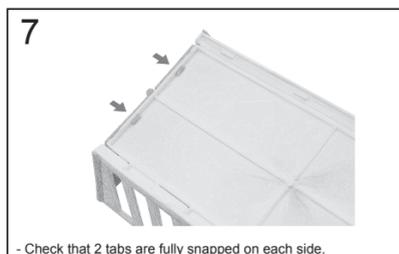

7 - Check that 2 tabs are fully snapped on each side.

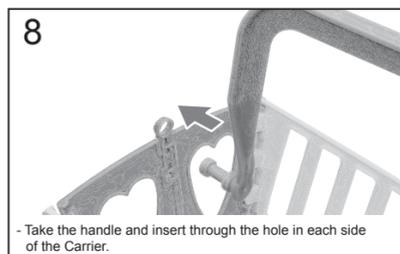


8 - Take the handle and insert through the hole in each side of the Carrier.

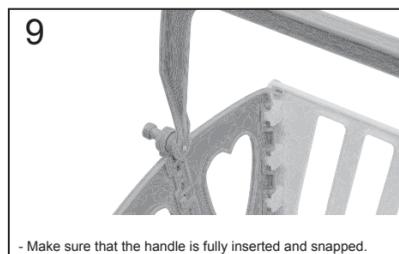


9 - Make sure that the handle is fully inserted and snapped.




10 - Your Carrier is now completely assembled and you can go on to assemble the Cradle.

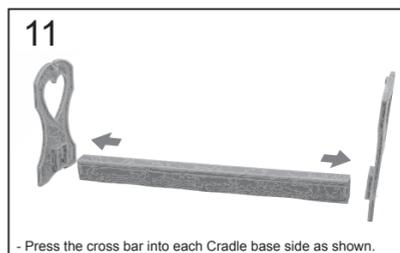

11 - Press the cross bar into each Cradle base side as shown.

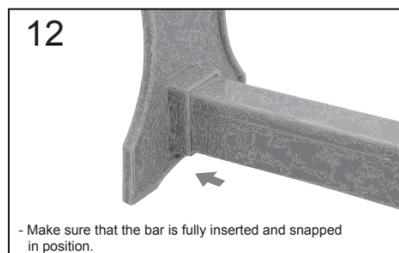

12 - Make sure that the bar is fully inserted and snapped in position.

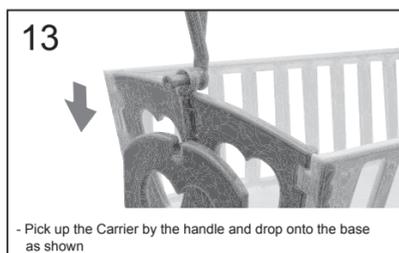

13 - Pick up the Carrier by the handle and drop onto the base as shown



14 - Your Carrier is now ready as a Cradle.




©2020 New Adventures LLC LTD., Energy Plaza, TST, KLN, HONG KONG
www.newadventuresllc.com
MADE IN CHINA (DONGGUAN)




2 in 1 Cradle n Carrier™

Instrucciones de montaje:

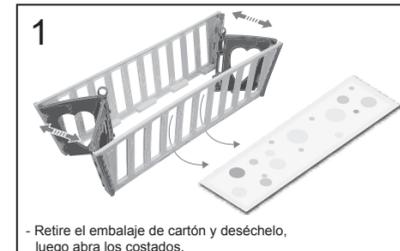


1 - Retire el embalaje de cartón y deséchelo, luego abra los costados.

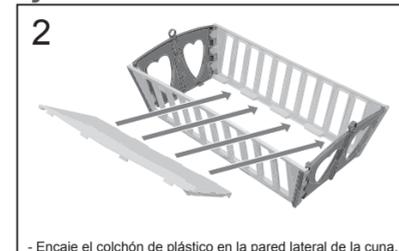

2 - Encaje el colchón de plástico en la pared lateral de la cuna.



3 - Doble el colchón de plástico hacia abajo en su posición dentro de la parte delantera, trasera y laterales del transportador

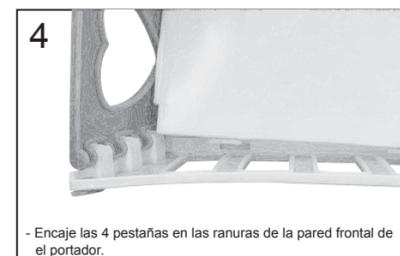


4 - Encaje las 4 pestañas en las ranuras de la pared frontal de el portador.



5 - Dé la vuelta al portador para asegurarse de que las 4 pestañas están completamente rotos.



6 - Mueva las paredes laterales hacia adentro y presione las pestañas los costados del piso.

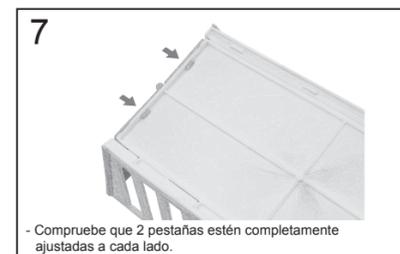

7 - Compruebe que 2 pestañas estén completamente ajustadas a cada lado.



8 - Tome la manija e inserte a través del orificio en cada lado del portador, y ajustada.



9 - Asegúrese de que el asa esté completamente insertada y ajustada.




10 - Su transportista ahora está completamente ensamblado y usted puede ir a armar la Cuna.



11 - Presione la barra transversal en cada lado de la base de la base como se muestra.



12 - Asegúrese de que la barra esté completamente insertada y ajustada en posición.

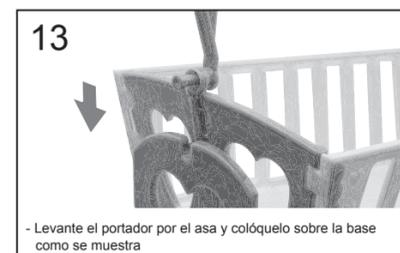

13 - Levante el portador por el asa y colóquelo sobre la base como se muestra



14 - Tu transportista ya está listo como cuna.



©2020 New Adventures LLC LTD., Energy Plaza, TST, KLN, HONG KONG
www.newadventuresllc.com
MADE IN CHINA (DONGGUAN)